


# I-136B/I-136G PARTS LIST

# Cheetah Adjustable

Small 12-2  
Medium 3-6

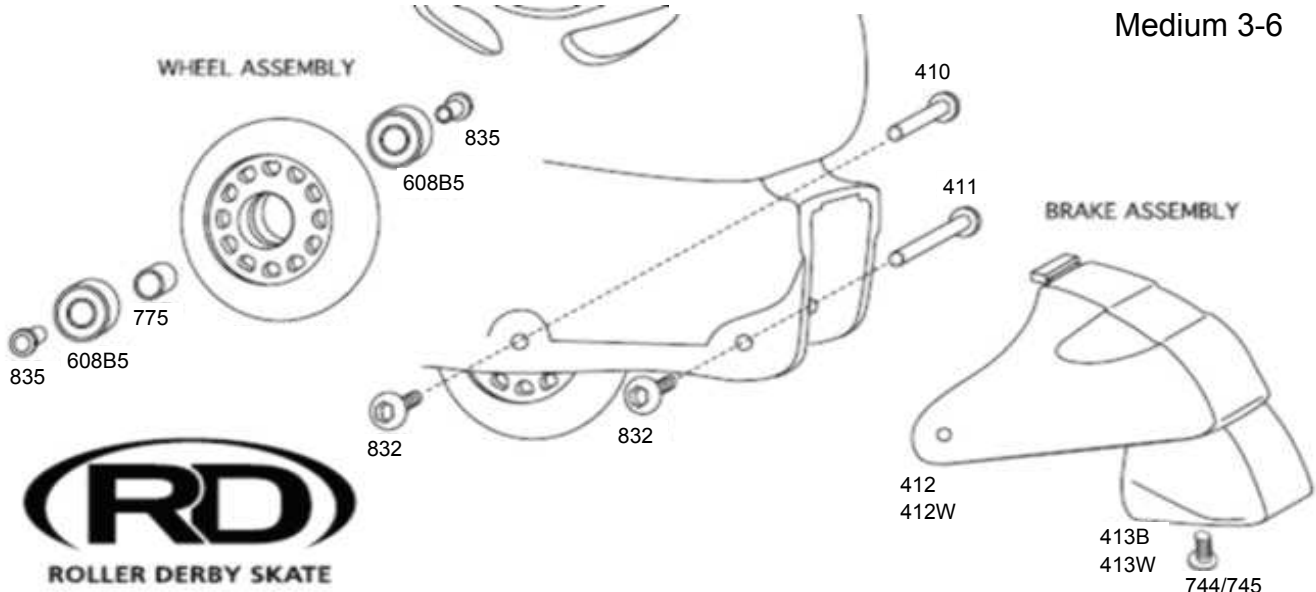

Part #	Description	Cost	Qty	Total	Part #	Description	Cost	Qty	Total
410	Female Axle	\$0.40			BF7282PK	Wheel - 72mm Pink	\$6.00		
832	Male Axle Screw	\$0.40			3236R	Strap/Lever Red/White	\$1.50		
835	Bearing Alignment Insert	\$0.40			3236G	Strap/Lever Green/Grey	\$1.50		
775	Bearing Spacer	\$0.20			413W	Heel Stop - White	\$1.50		
608B5	Bearing - Rated 5	\$2.50			412W	Heel Stop Bracket White	\$1.50		
744/745	Male Heel Stop Screw	\$0.40			413B	Heel Stop - Black	\$1.50		
411	Female Axle (Brake)	\$0.40			412	Heel Stop Bracket Black	\$1.50		
BF7282GN	Wheel - 72mm Green	\$6.00							

All orders must be paid by check, Visa, or Mastercard prior to shipment  
All orders are required to be faxed or mailed with signature

CA residents add 8% tax  
IL residents add 7.25% tax  
PA residents add 6% tax

Subtotal	
Tax	
Shipping and Handling	\$6.25
<b>TOTAL</b>	

Name: \_\_\_\_\_ Signature: \_\_\_\_\_ Phone: \_\_\_\_\_

Address: \_\_\_\_\_ City: \_\_\_\_\_ State: \_\_\_\_\_ Zip: \_\_\_\_\_

MC or Visa #: \_\_\_\_\_ Exp Date: \_\_\_\_\_

1. Check the axle screws on each wheel. The male and female should be tightened firmly prior to each use.
2. Check heel stop screw before skating. The male and female should be tightened firmly. If heel stop shows substantial wear, it should be replaced.

1. Prüfen sie die schrauben aller rollen, schraube und mutter vor gebrauch gut festdrehen.
2. Prüfen sie die schraube beim stopper bevor sie fahren. Schraube und mutter gut befestigen. Ersetzen sie den stopper, wenn er abgenutzt ist.

1. Sur chaque roue, vérifiez les vis de l'essieu. Les vis mâles et femelles doivent être serrées fermement avant l'utilisation des patins.
2. Vérifiez les vis du frein avant l'utilisation des patins. Les vis mâles et femelles doivent être serrées fermement. Si le frein arrière montre des signes apparents d'usure. Veuillez le remplacer.

1. Cheque los tornillos de cada rueda, macho y hembra de los tornillos deberan apretarse antes de cada uso.
2. Cheque todos los tornillos del freno para asegurarse que esten bien apretados. Si nota que la goma del freno esta gastada, esta debera ser reemplazada por una nueva