


# I-142B/I-142G PARTS LIST

## Rocket MDX Adjustable

Small sz 12-2 64 mm  
Medium sz 2-5 70 mm

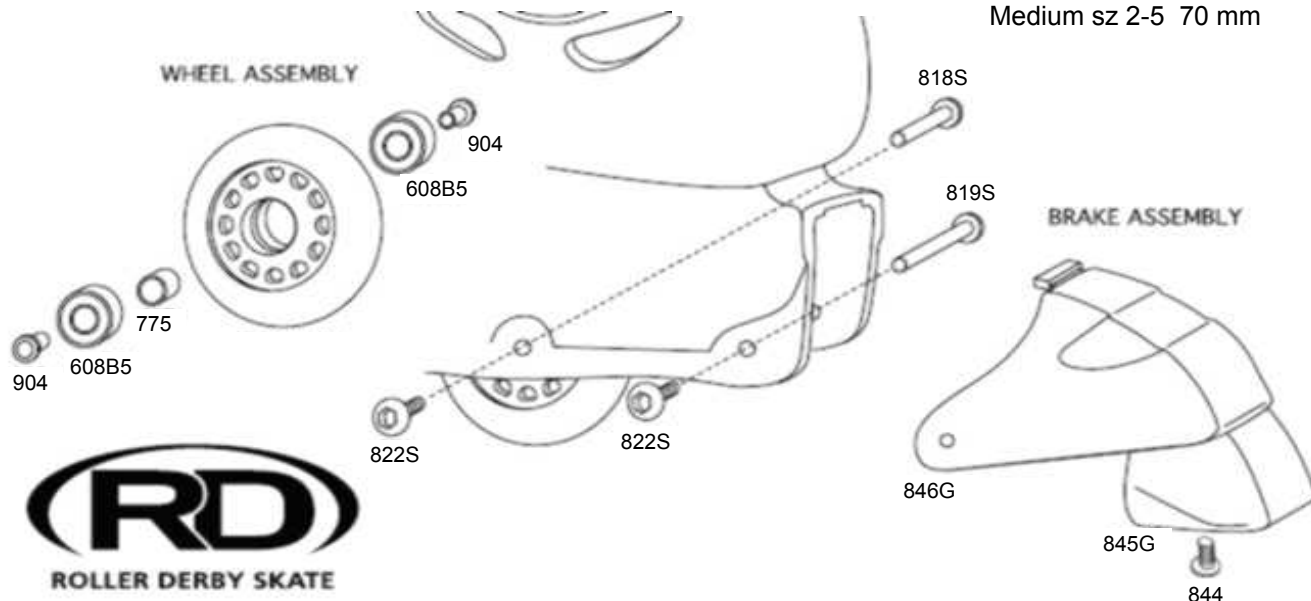

Part #	Description	Cost	Qty	Total	Part #	Description	Cost	Qty	Total
818S	Female Axle 32mm	\$0.40			3142P	Strap/Lever Ppl/Wht	\$1.50		
822S	Male Axle Screw 10 mm	\$0.40			3142B	Strap/Lever Blue/Black	\$1.50		
904	Bearing Alignment Insert	\$0.40			3442B	Clip - Black	\$1.00		
775	Bearing Spacer	\$0.20			845G	Heel Stop - Gray	\$1.50		
608B5	Bearing - ABEC 5	\$2.00			846G	Heel Stop Bracket	\$1.50		
844	Male Heel Stop Screw	\$0.40			BF7082PR	Med Wheel - 70mm Purple	\$5.00		
819S	Female Axle (Brake)	\$0.40			BF7082BU	Med Wheel - 70mm Blue	\$5.00		
BF6482PR	Small Wheel - 64mm Purple	\$4.00							
BF6482BU	Small Wheel - 64mm Blue	\$4.00							

All orders must be paid by check, Visa, or Mastercard prior to shipment  
All orders are required to be faxed or mailed with signature

CA residents add 8% tax  
IL residents add 7.25% tax  
PA residents add 6% tax

Subtotal	
Tax	
Shipping and Handling	\$6.25
<b>TOTAL</b>	

Name: \_\_\_\_\_ Signature: \_\_\_\_\_ Phone: \_\_\_\_\_

Address: \_\_\_\_\_ City: \_\_\_\_\_ State: \_\_\_\_\_ Zip: \_\_\_\_\_

MC or Visa #: \_\_\_\_\_ Exp Date: \_\_\_\_\_

1. Check the axle screws on each wheel. The male and female should be tightened firmly prior to each use.
2. Check heel stop screw before skating. The male and female should be tightened firmly. If heel stop shows substantial wear, it should be replaced.

1. Prüfen sie die schrauben aller rollen, schraube und mutter vor gebrauch gut festdrehen.
2. Prüfen sie die schraube beim stopper bevor sie fahren. Schraube und mutter gut befestigen. Ersetzen sie den stopper, wenn er abgenutzt ist.

1. Sur chaque roue, vérifiez les vis de l'essieu. Les vis males et femelles doivent être serrées fermement avant l'utilisation des patins.
2. Vérifiez les vis du frein avant l'utilisation des patins. Les vis males et femelles doivent être serrées fermement. Si le frein arriere montre des signes apparents d'usure. Veuillez le remplacer.

1. Cheque los tornillos de cada rueda, macho y hembra de los tornillos deberan apretarse antes de cada uso.
2. Cheque todos los tornillos del freno para asegurarse que esten bien apretados. Si nota que la goma del freno esta gastada, esta debera ser reemplazada por una nueva